

Thunderbuff™

Silicone-free nylon/polyester microfiber wipe

Thunderbuff™ polishing cloths are silicone-free, terry style woven wipes made of nylon/polyester microfiber. The keys to the incredible performance of this microfiber are the size, shape, and composition of the fibers used to make the threads of the cloth. Designed for easy removal of both oil-based and water-based residues, the conveniently sized 12" x 12" and 16" x 16" Thunderbuff wipes are ideal for many cleaning tasks.

Currently used in many North American automotive assembly plants, Thunderbuff microfiber is also available on 125' rolls, ideal for use in automated trim shops to preclean surfaces prior to application of side trim or roof ditch moldings, or any other adhesive-backed product.

Applications

- Designed for polishing exterior surfaces in automotive manufacturing, and for easy removal of surface contamination such as fingerprints and skin oils
- Ideal for cleaning prior to application of side trim or other moldings
- Effortlessly removes both oil-based and water-based residues and dirt from surfaces

The LWTB0001 and LWTB0006 wipes feature a proprietary wrapped hem, which ensures the wipes will retain shape and not develop curled or frayed edges.



Features	Benefits
Soft textured wipe	• Will not scratch painted surfaces
Polyester and nylon microfibers	• Easily remove both oil-and water based residues
Heavier, thicker fabric	• Holds more dirt and residues than average wiping cloth
A unique wrapped hem	• Increases durability and reduces linting from fraying edges

Part no.	Description	Size	Packaging
LWTB0001	Thunderbuff microfiber wipe Green	16" x 16" (406 x 406 mm)	10/bag; 4 bags/case
LWTB0001/100	Thunderbuff microfiber wipe Green, bulk	16" x 16" (406 x 406 mm)	100/bag; 1 bag/case
LWTB0006	Thunderbuff microfiber wipe White	12" x 12" (305 x 305 mm)	10/bag; 6 bags/case
LWTB0006/150	Thunderbuff microfiber wipe White, bulk	12" x 12" (305 x 305 mm)	150/bag; 1 bag/case
LWTB1212	Thunderbuff microfiber wipe Green	12" x 12" (305 x 305 mm)	10/bag; 6 bags/case


Product Information	
Material	Nylon/polyester microfiber
Construction	Waffle terry knit
Silicone content	None
Attributes (units)	Typical Value*
Basis weight (g/m²)	308 (+/-0.5%)
Size (in/cm)	16" x 16" (±0.5)/(40 x 40 (±1)) 12" x 12" (±0.5)/(30.5 x 30.5 (±1))
Thickness (mm)	1.5 (±0.2)



Laundering Instructions

Thunderbuff wipes are machine-washable up to 500 times in warm water with small concentrations of regular detergent. Tumble-dry. To retain the performance of the cloth, it is recommended that no bleach or fabric softener be used in the laundering process. Thunderbuff wipes should not be laundered with items that lint or contain heavily soiled residues.

The wedge-shaped filaments of Thunderbuff microfiber easily trap particles inside the fiber, leaving the surface free from residue. Cotton fibers push particles from one point to another, leaving dirt and grime on the surface.

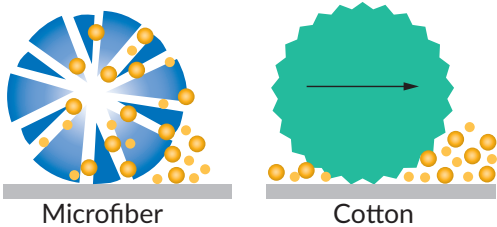

*Notes
a) The data shown are typical values and should not be used as product specifications.
b) Valid product comparisons may only be obtained through side-by-side testing in the same test facility, under similar conditions.
c) Current and/or comparison data may be available. Please contact a Contec sales representative for details.